

How to Retune/Rescan Your Top Up TV Digital Recorder

This applies to all Top Up TV Digital TV Recorders model types

Follow these simple instructions to Retune/Rescan your Top Up TV Digital Recorder to ensure that you have all the channels available to you after **National Retune Day** on the 30th September, 2009. Please note that some channels will be reordered on the Guide (different number) after the retune which is in line with the UK digital project.



Using the DTR remote control

- Press **Menu** button


Then

- Press **Set-Up** (4)



Using the DTR remote control

- Press **Scan for Channels** (1)

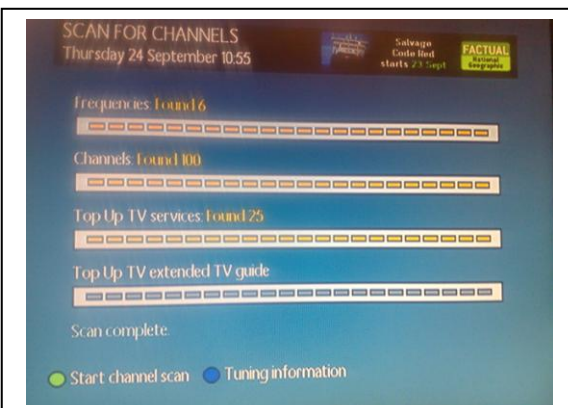

Using the DTR remote control

- Press **Green** button to begin scan

After approx 8 minutes '**scan complete**' will be shown

- Press **Live TV** button to resume viewing